

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO OUT
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
-/--
DISPLAY
ZERO STOP
OSD
VIDEO PLUS+
TRACKING / V-LOCK+
TRACKING / V-LOCK-
SKIP / INDEX NEXT
SKIP / INDEX PREV.
UP
DOWN
LEFT
RIGHT
RESET
SLOW
CHECK
RECORDING SP LP
TIMER REC

PAUSE / STILL
STOP
REC
REW
PLAY
FWD
^ / v
^ / v
---
ON+
ON-
OFF-
OFF+
STORE
DATE-
DATE+
T
TV POWER
TV / AV
VOLUME+
VOLUME-
^
v

POWER, AUDIO OUT, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, DISPLAY, ZERO STOP, OSD, VIDEO PLUS+, TRACKING / V, LOCK+, VOL+, LOCK, VOL, SKIP / INDEX NEXT, SKIP / INDEX PREV, ABAJO, IZQUIERDA, DERECHA, RESET, BACK, SLOW, SLEEP, CHECK, INFO, RECORDING SP LP, EPG, TIMER REC, FAV, PAUSE / STILL, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, 1/7, 3/9, 0ON+, OFF, OFF+, STORE, DATE, DATE+, TV POWER, TV / AV, / AV, VOLUME+, VOL+, VOLUME, VOL, .