

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



⏻
AUDIO
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
AV / INPUT SELECT
-/--
OSD / DISPLAY
VIDEO PLUS+
REPLAY
TV / TEXT
VOLUME+
VOLUME-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
OK
RESET
⌚ / TIMER REC
SP / LP
PDC

PROG. CHECK
DIREC TV REC
TV ASPECT
PAUSE
STOP
REC
REW
PLAY
FWD
SEARCH
⤴
⤵
DATE+
DATE-
TRACKING / V-LOCK+
TRACKING / V-LOCK-
ON+
ON-
OFF-
OFF+
CANCEL
RED
GREEN
YELLOW
BLUE

POWER, AUDIO, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV / INPUT SELECT, / AV, OSD / DISPLAY, VIDEO PLUS+, REPLAY, TV / TEXT, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, RESET, BACK, / TIMER REC, SLEEP, SP / LP, TV/DTV, PDC, INFO, PROG CHECK, EPG, DIREC TV REC, FAV, TV ASPECT, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, SEARCH, DATE+, VOL+, DATE, VOL, TRACKING / V, LOCK+, LOCK, ON+, OFF, OFF+, CANCEL, .