

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
ASPECT
MIX
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
SLEEP
TV / RADIO
INDEX

EPG
FAV
AUTO
HOLD
RED
GREEN
YELLOW
BLUE
AUDIO / I/II
CANCEL
P. MODE
S. MODE
REVEAL
SIZE
TIME SHIFT
SUBTITLE
FAV -
FAV+
SUBPAGE
SKIP NEXT/PREV
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, SOURCE, DISPLAY, ASPECT, MIX, TEXT, VOL+, VOL-, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, TV / RADIO, TV/DTV, INDEX, INFO, EPG, FAV, AUTO, / NET TV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO / I/II, CANCEL, P MODE, S MODE, REVEAL, SIZE, TIME SHIFT, SUBTITLE, FAV, FAV+, SUBPAGE, SKIP, NEXT/PREV, P +/, STOP, REC, REW, PLAY / PAUSE, FWD, .