

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



[Power icon]
[Mute icon]
[Home icon]
1/2/3/4/5
6/7/8/9/0
[Source icon] / SOURCE
[List icon] / LIST
[Smart TV icon] / SMART TV
[Format icon] / FORMAT
SUBTITLE
TEXT
+
-
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK
[Return icon]
[Clock icon] / CLOCK
[TV icon] / TV
i / INFO
[Guide icon] / GUIDE
[Channel Grid icon] / CHANNEL GRID
[Adjust icon] / ADJUST
[Net TV icon]
RED
GREEN
YELLOW
BLUE
[Options icon] / OPTIONS
MY CHOICE
[Theme TV icon] / THEME TV

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 0/6/7/8/9/, 0 / SOURCE, / SOURCE, / LIST, / SMART TV, / FORMAT, SUBTITLE, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, BACK, / CLOCK, SLEEP, / TV, TV/DTV, i / INFO, INFO, / GUIDE, EPG, / CHANNEL GRID, FAV, / ADJUST, / NET TV, ROJO, VERDE, AMARILLO, AZUL, / OPTIONS, MY CHOICE, / THEME TV, .