

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER RECEIVER
MUTING
HOME / Q.
1/2/3/4/5
6/7/8/9/0
SEARCH
DISPLAY
SETUP
VOL+
VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
DIMMER
MODE
PAUSE
STOP
REW
PLAY
FWD

MENU
AUX
BD/DVD
BLUET.
CBL/SAT
CD
GAME
NET
PC
PHONO
STRM. BOX
TV
TUNER
CH/DISC/ALBUM+
CH/DISC/ALBUM -
PLAYLIST PREV
PLAYLIST NEXT
REPEAT
RED / A / MOVIE/TV
GREEN / B / MUSIC
YELLOW / C / GAME
BLUE / D / STEREO

POWER RECEIVER, POWER, MUTING, MUTE, HOME / Q, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SEARCH, DISPLAY, SETARRIBA, VOL+, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, DIMMER, INFO, MODE, FAV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUX, BD/DVD, AZULT, CBL/SAT, GAME, NET, PHONO, STRM BOX, 0TV, TUNER, CH/DISC/ALBUM+, CH/DISC/ALBUM, PLAYLIST PREV, PLAYLIST NEXT, REPEAT, ROJO / A / MOVIE/TV, ROJO, VERDE / B / MUSIC, AMARILLO / C / GAME, AZUL / D / STEREO, .