

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
SIZE
MIX
TXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
RECALL
SLEEP
TV/RADIO
INDEX

EPG
FAV
ASPECT
HOLD
RED
GREEN
YELLOW
BLUE
AUDIO / NICAM
PVR MENU
P. MODE
S. MODE
MEDIA
LIST
REVEAL / SUBTITLE
SKIP NEXT
SKIP PREV
SUBPAGE
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, SOURCE, DISPLAY, SIZE, MIX, TXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RECALL, BACK, SLEEP, TV/RADIO, TV/DTV, INDEX, INFO, EPG, FAV, ASPECT, / NET TV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO /, NICAM, PVR MENU, P MODE, S MODE, MEDIA, LIST, REVEAL / SUBTITLE, SKIP, NEXT, PREV, SUBPAGE, STOP, REC, REW, PLAY / PAUSE, FWD, .