


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
SIZE
MIX
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK/ENTER

SLEEP
MEDIA
INDEX

EPG
FAV
HOLD
RED
GREEN
YELLOW
BLUE
S. MODE
CANCEL
AUDIO / I/II
REVEAL
P. MODE
SUBTITLE
SUBPAGE
FAV -
FAV+
SKIP PREV/NEXT
TV / RADIO
TIMESHIFT
PAUSE
STOP
REC
REW
PLAY
FWD

STANDBY, POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, DISPLAY, SIZE, MIX, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, OK/ENTER, BACK, SLEEP, MEDIA, TV/DTV, INDEX, INFO, EPG, FAV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, S MODE, CANCEL, AUDIO / I/II, REVEAL, P MODE, SUBTITLE, SUBPAGE, FAV, FAV+, SKIP, PREV/, NEXT, P+, TV / RADIO, TV/DTV, TIMESHIFT, PAUSE, STOP, REC, REW, PLAY, FWD, .