

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
ASPECT
T. SHIFT
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
SLEEP
DTV
EPG

FAV
AUTO
FREEZE
HOLD
RED
GREEN
YELLOW
BLUE
AUDIO
P. MODE
S. MODE
NICAM / A2
REVEAL
SIZE
SUBTITLE
S. PAGE
SKIP NEXT
SKIP PREV
TV / RADIO
INDEX
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, DISPLAY, ASPECT, T SHIFT, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, DTV, TV/DTV, EPG, FAV, AUTO, / NET TV, FREEZE, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO, P MODE, S MODE, NICAM / A2, REVEAL, SIZE, SUBTITLE, S PAGE, SKIP NEXT, SKIP PREV, TV / RADIO, TV/DTV, INDEX, INFO, STOP, REC, REW, PLAY / PAUSE, FWD, .