

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
DISPLAY
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
SLEEP
ATV / DTV
INDEX
GUIDE
FAV / LIST
ASPECT

FREEZE
HOLD
RED
GREEN
YELLOW
CYAN
MTS
CANCEL
P. MODE
S. MODE
REVEAL
SIZE
SUBTITLE
SUB. PG
SKIP NEXT
SKIP PREV
TIMESHIFT
TV / RADIO
REC LIST
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, DISPLAY, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, ATV / DTV, TV/DTV, INDEX, INFO, GUIDE, EPG, FAV / LIST, FAV, ASPECT, / NET TV, FREEZE, HOLD, / SMART, ROJO, VERDE, AMARILLO, CYAN, AZUL, MTS, CANCEL, P MODE, S MODE, REVEAL, SIZE, SUBTITLE, SUB, SKIP NEXT, SKIP PREV, TIMESHIFT, TV / RADIO, TV/DTV, REC LIST, STOP, REC, REW, PLAY / PAUSE, FWD, .