

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



| |
|------------------|
| DVD |
| FUNCTION MENU |
| EXIT |
| 1/2/3/4/5 |
| 6/7/8/9/0 |
| INPUT SELECT |
| DRIVE SELECT |
| DISPLAY |
| PROG / CHECK |
| SHOW VIEW |
| / STTL |
| CH/PAGE+ |
| CH/PAGE - |
| UP |
| DOWN |
| LEFT / STEP BACK |
| RIGHT / STEP FWD |
| OK |
| RETURN |
| TIME SLIP |
| DIRECT TV REC |
| i / STATUS |
| GUIDE |
| RED |
| GREEN |

| |
|---------------------|
| YELLOW / CREATE CH. |
| BLUE / MANUAL SKIP |
| AUDIO |
| DIRECT NAVIGATOR |
| * / DELETE |
| EXT LINK |
| OPTION |
| SKIP NEXT |
| SKIP PREV |
| REC MODE |
| PAUSE |
| STOP |
| REC |
| SLOW/SEARCH REW |
| PLAY |
| SLOW/SEARCH FWD |
| T |
| |
| AV |
| CH+ |
| CH - |
| VOL+ |
| VOL - |

DVD, POWER, FUNCTION MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / SOURCE, DRIVE SELECT, DISPLAY, PROG / CHECK, SHOW VIEW, / STTL, CH/PAGE+, CH/PAGE, ABAJO, IZQUIERDA / STEP BACK, IZQUIERDA, DERECHA / STEP FWD, DERECHA, RETURN, BACK, TIME SLIP, SLEEP, DIRECT, TV REC, TV/DTV, i / STATUS, INFO, GUIDE, EPG, ROJO, VERDE, AMARILLO / CREATE CH, AMARILLO, AZUL / MANUAL SKIP, AZUL, AUDIO, MUTE, DIRECT NAVIGATOR, / DELETE, EXT LINK, OPTION, SKIP NEXT, SKIP PREV, REC MODE, FAV, PAUSE, STOP, REC, SLOW/SEARCH, REW, PLAY, SLOW/SEARCH FWD, CH+, VOL+, VOL, .