


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.

DV

AUDIO
MENU – SYSTEM
CLEAR
1/2/3/4/5
6/7/8/9/0
DVD
SEARCH
DISPLAY
ZOOM
ANGLE
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
OK
 / RETURN
REPEAT – A-B
SHUFFLE
TITLE

MENU – DISC
PROGRAM
OPEN / CLOSE
PAUSE / STEP
STOP
MARKER
REPEAT
PLAY
V

MENU – SYSTEM
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT
SEARCH
DISPLAY
MARKER
SHOW V. / VIDEOP.+
DOWN
UP
LEFT
RIGHT
OK

SKIP NEXT
SKIP PREV
VCR
TV / VIDEO
 / CHILD LOCK
PROGRAM
EJECT
PAUSE / STEP
STOP
RECORD
PLAY

DVD, POWER, AUDIO, MUTE, MENU, SYSTEM, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, SOURCE, SEARCH, DISPLAY, ZOOM, ANGLE, SUBTITLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, / RETURN, BACK, REPEAT, SLEEP, SHUFFLE, TV/DTV, TITLE, INFO, DISC, EPG, PROGRAM, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, MARKER, ROJO, REPEAT, VERDE, PLAY, AMARILLO, VCR, 0INPUT, SHIFT, SHOW V / VIDEOP+, NEXT, TV / VIDEO, TV/DTV, CHILD LOCK, EJECT, RECORD, .