## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER	
DVD MENU	į
CLEAR	
1/2/3/4/	5
6/7/8/9/0	)
SEARCH	
DISPLAY	
🖺 / ANGL	E
SKIP NEXT	ij
SKIP PRE	1
UP	
DOWN	
LEFT	
RIGHT	
ENTER	
RETURN	
*	
PROGRAM	Ú
RANDOM	
OPEN / CLO	SE
PAUSE / ST	ΕP
STOP	
SCAN REW	ı
PLAY	
SCAN FWE	)

OD / AUDIO	
ZOOM	
SETUP	
/ SUBTITLE	
REPEAT	
A - B	
TITLE	
MARKER	
-	Г
POWER	
AV	
VOL+	
VOL -	
PR / CH+	
PR / CH -	
	_
	-
	-

POWER, DVD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SEARCH, DISPLAY, / ANGLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, INFO, PROGRAM, EPG, RANDOM, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, SCAN REW, VERDE, PLAY, AMARILLO, SCAN FWD, AZUL, / AUDIO, MUTE, ZOOM, SETARRIBA, / SUBTITLE, REPEAT, SLEEP, TITLE, MARKER, SHIFT, VOL+, VOL, PR /, CH+, .