## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
MENU
EXIT / SLOW
1/2/3/4/5
6/7/8/9/0
DVD / DVB
P/N
DISPLAY / INFO
ANGLE
TXT / SEARCH
VOL+
VOL-
CH+
CH-
UP
DOWN
LEFT
RIGHT
OK
RETURN
TV/RADIO / Q-PLAY
GAME
EPG / RANDOM
FAV / A-B

RED
GREEN
YELLOW / LIST
BLUE
AUDIO
PBC / DIGEST
VIDEO
ZOOM
SETUP
SUBTITLE
PAGE DOWN
PAGE UP
PREV.
NEXT
MEDIA
TITLE
OPEN/CLOSE
PAUSE
STOP / SLEEP
REC / REPEAT
REW
PLAY / PAUSE
FF

STANDBY, POWER, MUTE, MENU, EXIT / SLOW, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD / DVB, / N, DISPLAY / INFO, ANGLE, TXT / SEARCH, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TV/RADIO, / Q, PLAY, TV/DTV, GAME, INFO, EPG, / RANDOM, FAV, / A, ROJO, VERDE, AMARILLO / LIST, AMARILLO, AZUL, AUDIO, PBC, / DIGEST, VIDEO, ZOOM, SETARRIBA, SUBTITLE, PAGE ABAJO, PAGE ARRIBA, PREV, NEXT, MEDIA, SLEEP, TITLE, OPEN/CLOSE, PAUSE, STOP / SLEEP, REC / REPEAT, REW, PLAY / PAUSE, .