

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
/ MENU
CANCEL
1 / RDS DISPLAY
2
3 / TA
4 / PTY -
5 / PTY SEARCH
6 / PTY+
7/8/9/0
MO/ST / SLOW
DSP / EQ.
ZOOM
SLIDE MODE
SUB TITLE
VOLUME -/+
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
/ ENTER
/ RETURN

SLEEP
INFO
DOLBY PLII EFFECT
DOLBY PLII MODE
OPEN / CLOSE
REMAIN
STOP
REW
PLAY / PAUSE
FWD
AUDIO
DVD
TUNER / BAND
AUX
P. SCAN / TUNER MEM.
LOGO
SOUND EDIT
NTSC/PAL / EZ. VIEW
TEST TONE
TUNING/CH. DOWN
TUNING/CH. UP
REPEAT
STEP
DIMMER / TV/VIDEO
DIGEST

POWER, MUTE, / MENU, MENU, CANCEL, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY-, 5 / PTY SEARCH, 6 / PTY+, 7/8/9/, 0/7/8/9/, 0MO/ST / SLOW, DSP / EQ, ZOOM, SLIDE MODE, SUB TITLE, VOLUME, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, SLEEP, INFO, DOLBY PLII EFFECT, EPG, DOLBY PLII MODE, FAV, OPEN / CLOSE, / NET TV, REMAIN, STOP, / SMART, REW, VERDE, PLAY, / PAUSE, AMARILLO, FWD, AZUL, AUDIO, DVD, TUNER / BAND, AUX, P SCAN / TUNER MEM, LOGO, SOUND, EDIT, NTSC/PAL / EZ VIEW, TEST TONE, TUNING/CH ABAJO, TUNING/CH ARRIBA, REPEAT, STEP, DIMMER / TV/VIDEO, DIGEST, .