

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
→ / EXIT
1/2/3/4/5
6/7/8/9/0
TIMER / CLOCK
P. SOUND
ZOOM
DEMO / DIMMER
SUBTITLE
VOL+
VOL-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
↵ / ENTER
↻ / RETURN
SLEEP
MO / ST
INFO
TUNER MEMORY

CD RIPPING
EJECT
PAUSE
STOP
REW
PLAY
FWD
TIMER ON/OFF
AUDIO
AUX
DVD
TUNER
USB
TUNING+
TUNING-
TRE / BASS
ANGLE

POWER, MUTE, MENU, / EXIT, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0TIMER / CLOCK, P SOUND, ZOOM, DEMO / DIMMER, SUBTITLE, VOL+, VOL-, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, SLEEP, MO / ST, TV/DTV, INFO, TUNER MEMORY, EPG, CD RIPPING, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TIMER ON/OFF, AUDIO, AUX, DVD, TUNER, USB, TUNING+, TUNING, TRE / BASS, ANGLE, .