

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU /
EXIT /
1/2/3/4/5
6/7/8/9/0
SOURCE /
CH. LIST /
P. MODE
P. SIZE
TOOLS /
TTX / MIX
VOL+
VOL -
P+ / NEXT PAGE
P- / PREV PAGE
UP
DOWN
LEFT
RIGHT
RETURN /
AD / SUBT.
INFO /
GUIDE

CONTENT
RED / A
GREEN / B
YELLOW / C
BLUE / D
DUAL / I-II
HDMI
PRE-CH. /
E – MANUAL
SRS
PAUSE
STOP
REC
REW / SKIP PREV
PLAY
FWD / SKIP NEXT

POWER, MUTE, MENU /, MENU, EXIT /, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE /, / SOURCE, CH LIST /, P MODE, P SIZE, TOOLS /, TTX / MIX, VOL+, VOL, P+ / NEXT PAGE, / PREV PAGE, ABAJO, IZQUIERDA, DERECHA, RETURN /, BACK, AD / SUBT, TV/DTV, INFO /, INFO, GUIDE, EPG, CONTENT, FAV, ROJO / A, ROJO, VERDE / B, VERDE, AMARILLO / C, AMARILLO, AZUL /, AZUL, DUAL / I, HDMI, PRE, MANUAL, SRS, PAUSE, STOP, REC, REW / SKIP PREV, PLAY, FWD / SKIP NEXT, .