

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
/ AUDIO
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
HDMI
+10
DISPLAY
ZOOM
/ ANGLE
/ SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
T / SEARCH
MEMORY
NAVI.
OPEN / CLOSE
PAUSE / STEP

STOP
REV.
PLAY
FWD
E.A.M.
TOP MENU
E.P.M.
SETUP
SLOW BACK
SLOW FWD
A – B RPT.
PBC
PROGRESSIVE
PLAY MODE

POWER, / AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0HDMI, SOURCE, DISPLAY, ZOOM, / ANGLE, / SUBTITLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, / SEARCH, INFO, MEMORY, EPG, NAVI, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, REV, VERDE, PLAY, AMARILLO, FWD, AZUL, EAM, TOP MENU, EPM, SETARRIBA, SLOW BACK, SLOW FWD, RPT, PBC, PROGRESSIVE, PLAY MODE, .