

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO
CANCEL
1/2/3/4/5
6/7/8/9/0
PLAY MODE
> = 10
DISPLAY
ZOOM
SETUP
SUBTITLE
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
ANGLE / PAGE
A-SRD
POSITION MEMORY
DIRECT NAV. / TOP MENU
OPEN / CLOSE

PAUSE
STOP
SLOW / SEARCH REW
PLAY
SLOW / SEARCH FWD
PLAY LIST
CINEMA
QUICK REPLAY
DEPTH / ENH
GROUP
DOUBLE RE-MASTER

POWER, AUDIO, MUTE, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0PLAY MODE, / AV, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, ANGLE / PAGE, TV/DTV, SRD, INFO, POSITION MEMORY, EPG, DIRECT NAV / TOP MENU, FAV, OPEN / CLOSE, PAUSE, STOP, SLOW / SEARCH REW, VERDE, PLAY, AMARILLO, SLOW / SEARCH FWD, AZUL, PLAY LIST, CINEMA, QUICK REPLAY, DEPTH / ENH, GROARRIBA, DOUBLE RE, MASTER, .