

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>ON / SOURCE</b>
<b>AUDIO</b>
<b>MENU</b>
<b>CD</b>
<b>DBS</b>
<b>DVD</b>
<b>CDR / TAPE</b>
<b>TUNER</b>
<b>TV</b>
<b>V. AUX</b>
<b>VCR</b>
<b>VDP</b>
<b>SHIFT</b>
<b>DISPLAY</b>
<b>VIDEO SELECT</b>
<b>SETUP</b>
<b>TEST TONE</b>
<b>-</b>
<b>+</b>
<b>CHANNEL-</b>
<b>CHANNEL+</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>

<b>ENTER</b>
<b>RETURN</b>
<b>CH. SELECT</b>
<b>DIMMER</b>
<b>MEMORY</b>
<b>SPEAKER</b>
<b>INPUT – EXT. IN</b>
<b>INPUT – MODE</b>
<b>INPUT – ANALOG</b>
<b>OFF</b>
<b>5 CH./6 CH. STEREO</b>
<b>CINEMA</b>
<b>DIRECT</b>
<b>STANDARD</b>
<b>DSP SIMULATION</b>
<b>DTS</b>
<b>MUSIC</b>
<b>STEREO</b>
<b>VIRTUAL SURROUND</b>
<b>MODE</b>
<b>ON SCREEN</b>
<b>PRESET PREV.</b>
<b>PRESET NEXT</b>
<b>SURROUND BACK</b>
<b>SURR. PARAMETER</b>

ON / SOURCE, POWER, AUDIO, MUTE, MENU, DBS, DVD, CDR / TAPE, TUNER, V AUX, VCR, VDP, / AV, SHIFT, DISPLAY, VIDEO SELECT, SETARRIBA, TEST TONE, VOL, VOL+, CHANNEL, CHANNEL+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, CH SELECT, TV/DTV, DIMMER, INFO, MEMORY, EPG, SPEAKER, FAV, INPUT, EXT IN, ROJO, MODE, VERDE, ANALOG, AMARILLO, OFF, 5 CH/6 CH STEREO, CINEMA, DIRECT, STANDARD, DSP SIMULATION, DTS, MUSIC, STEREO, VIRTUAL SURROUND, ON SCREEN, PRESET PREV, PRESET NEXT, SURROUND BACK, SURR PARAMETER, .