

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>STANDBY / ON</b>
<b>TV MUTE</b>
<b>MENU</b>
<b>CANCEL / X</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>TV AV / VIDEO</b>
<b>SHOWVIEW/VIDEO PLUS+</b>
<b>DISPLAY</b>
<b>PROGRESSIVE SCAN</b>
<b>SETUP</b>
<b>SUBTITLE</b>
<b>VOL+</b>
<b>VOL-</b>
<b>SKIP NEXT</b>
<b>SKIP PREV.</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETURN</b>
<b>⊕ / SAT</b>
<b>DVD</b>
<b>ON SRCEEN</b>

<b>PROG. / CHECK</b>
<b>TOP MENU</b>
<b>OPEN / CLOSE</b>
<b>PAUSE</b>
<b>STOP</b>
<b>REC</b>
<b>REW / SLOW-</b>
<b>PLAY</b>
<b>FWD / SLOW+</b>
<b>⌚ / TIMER</b>
<b>AUDIO</b>
<b>NAVIGATION</b>
<b>LIVE MODE</b>
<b>REC MODE</b>
<b>ANGLE</b>
<b>PR.+</b>
<b>PR.-</b>
<b>↶</b>
<b>↷</b>
<b>SELECT</b>
<b>CLEAR</b>

STANDBY / ON, POWER, TV MUTE, MUTE, MENU, CANCEL / X, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0TV AV / VIDEO, / AV, SHOWVIEW/VIDEO PLUS+, DISPLAY, PROGRESSIVE SCAN, SETARRIBA, SUBTITLE, VOL+, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, / SAT, SLEEP, DVD, TV/DTV, ON SRCEEN, INFO, PROG / CHECK, EPG, TOP MENU, FAV, OPEN / CLOSE, PAUSE, STOP, REC, ROJO, REW / SLOW, VERDE, PLAY, AMARILLO, FWD / SLOW+, AZUL, / TIMER, AUDIO, NAVIGATION, LIVE MODE, REC MODE, ANGLE, PR+, SELECT, CLEAR, .