## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



	ON / STANDBY
	A . SELECT
C	OUNTER RESET
	1/2/3/4/5
	6/7/8/9/0
	PRESET / 1-
	SAT. MOMI.
	SKIP
	SP / LP
	DT
S	HIFT → / VOL+
	SHIFT ← / VOL-
	CHANNEL+
	CHANNEL-
	TRACKING+
	TRACKING-
	SEARCH-
	SEARCH+
	A . SELECT
3	ZERO RETURN
s	LOW / 1/6°1/12
	TV / VTR
	INDEX
٧	IDEO PLUS / CANCEL
	REMAIN

PAUSE / STI	LL
STOP / FRAN	1E
REC	
REW	
PLAY	
FF	
TIMER	
PDC	
OTR	
OSP	
FINE+	
FINE-	

ON / STANDBY, POWER, A SELECT, MUTE, COUNTER RESET, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0PRESET / 1, SAT MOMI, SKIP, SP / LP, SHIFT, / VOL+, VOL+, VOL, VOL, CHANNEL+, CHANNEL, TRACKING+, TRACKING, ABAJO, SEARCH, IZQUIERDA, SEARCH+, DERECHA, ZERO RETURN, BACK, SLOW / 1/6, 1/12, SLEEP, TV / VTR, TV/DTV, INDEX, INFO, VIDEO PLUS / CANCEL, EPG, REMAIN, FAV, PAUSE / STILL, STOP / FRAME, REC, ROJO, REW, VERDE, PLAY, AMARILLO, AZUL, TIMER, PDC, OTR, OSP, FINE+, FINE, .