

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.  
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
AUDIO
🏠 / HOME MENU
EXIT
1/2/3/4/5
6/7/8/9/0
FUNCTION
SECONDARY VIDEO
DISPLAY
↔ / SKIP SEARCH
ANGLE
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
↩ / RETURN
VIDEO OUTPUT RESET
REPLAY
FRONT LIGHT
DIR. NAVI. / TOP MENU
OPEN / CLOSE

PAUSE
STOP
REW
PLAY
FWD
POP UP MENU / MENU
CLEAR
PAGE+
PAGE -
REPEAT
REPEAT OFF
RED
GREEN
YELLOW
BLUE

STANDBY / ON, POWER, AUDIO, MUTE, / HOME MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, SOURCE, SECONDARY VIDEO, DISPLAY, / SKIP SEARCH, ANGLE, SUBTITLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, VIDEO OUTPUT RESET, TV/DTV, REPLAY, INFO, FRONT LIGHT, EPG, DIR NAVI / TOP MENU, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, POP ARRIBA MENU / MENU, CLEAR, PAGE+, PAGE, REPEAT, REPEAT OFF, SLEEP, ROJO, .