

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
MENU OFF
1/2/3/4/5
6/7/8/9/0
S – DIRECT
ATT.
DISP. / RDS
DOLBY
SET UP / T. TONE
F. DIRECT
MAIN VOL. +/-
TUNE/SEARCH NEXT
TUNE/SEARCH PREV
UP
DOWN
LEFT
RIGHT
OK
CLEAR
SLEEP
A. / D.
DIMMER
MEMO.

MODE
AUTO
BASS -/+
TREBLE -/+
AUX
CD
CDR / MD
DSS / VCR 2
TAPE
TUNER
TV
VCR 1
P. SCAN
OSD
DSP
DTS
CS. 5.1
CHANNEL/SKIP NEXT
CHANNEL/SKIP PREV
NIGHT
PTY.
2 CH.
6.1
6 – STEREO
7 CH – DIR.

POWER, MUTE, MENU, MENU OFF, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, DIRECT, / SOURCE, ATT, DISP / RDS, DOLBY, SET ARRIBA / T TONE, F DIRECT, MAIN VOL, VOL +/, TUNE/SEARCH NEXT, TUNE/SEARCH PREV, ABAJO, IZQUIERDA, DERECHA, CLEAR, BACK, SLEEP, A / D, TV/DTV, DIMMER, INFO, MEMO, EPG, MODE, FAV, AUTO, / NET TV, BASS, ROJO / VERDE, TREBLE, AMARILLO / AZUL, AUX, CDR / MD, DSS / VCR 2, TAPE, TUNER, VCR 1, P SCAN, OSD, DSP, DTS, CS 51, CHANNEL/SKIP NEXT, CHANNEL/SKIP PREV, NIGHT, PTY, 2 CH, ROJO, VERDE, STEREO, AMARILLO, DIR, AZUL, .