

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
CHN. LIST
HOME
SIZE
MIX
TEXT
VOL -/+
PR -/+
UP
DOWN
LEFT
RIGHT
ENTER
BACK / RETURN
SLEEP
AD
INFO
EPG
FAV

PICTURE
FREEZE / HOLD
RED
GREEN
YELLOW
BLUE
I/II / NICAM
CANCEL
SOUND
3D
PVR LIST
REVEAL
ZOOM
SUB-PAGE
SUBTITLE
SKIP NEXT
SKIP PREV
QUICK
TV / RADIO
INDEX
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, CHN LIST, HOME, SIZE, MIX, TEXT, VOL, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK / RETURN, BACK, SLEEP, TV/DTV, INFO, EPG, FAV, PICTURE, / NET TV, FREEZE / HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, I/II / NICAM, CANCEL, SOUND, PVR LIST, REVEAL, ZOOM, SUB, PAGE, SUBTITLE, SKIP NEXT, SHIFT, + P+, SKIP PREV, QUICK, TV / RADIO, TV/DTV, INDEX, STOP, REC, REW, PLAY / PAUSE, FWD, .