

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY – ON
AUDIO
MENU / LIST
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
GUIDE
DISPLAY
SETUP
TEXT
PROG. ^
PROG. v
UP
DOWN
LEFT
RIGHT
ENTER / OK
RETURN / BACK
TIME SHIFT
DUBBING
i+
SAT. LINK
TOP MENU
EJECT

RED
GREEN
YELLOW / SYSTEM
BLUE / SEARCH
HDMI
VCR
DVD
SUBTITLE
SKIP NEXT
SKIP PREV
TIMER SET
TIMER PROG.
1.3X / 0.8X / PLAY
CM SKIP
REC SPEED
PAUSE
STOP
REC
REV.
PLAY
FWD

STANDBY, POWER, AUDIO, MUTE, MENU / LIST, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, SOURCE, GUIDE, DISPLAY, SETARRIBA, TEXT, PROG, ABAJO, IZQUIERDA, DERECHA, ENTER / OK, RETURN, / BACK, BACK, TIME SHIFT, SLEEP, DUBBING, TV/DTV, INFO, SAT LINK, EPG, TOP MENU, FAV, EJECT, / NET TV, ROJO, VERDE, AMARILLO / SYSTEM, AMARILLO, AZUL / SEARCH, AZUL, HDMI, VCR, DVD, SUBTITLE, SKIP NEXT, SKIP, PREV, TIMER SET, SHHIFT+BACK, TIMER PROG, 13X / 08X / PLAY, CM SKIP, REC SPEED, PAUSE, STOP, REC, REV, PLAY, FWD, .