

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MUTING</b>
<b>MENU / PL / SETTINGS</b>
<b>CANCEL</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>10</b>
<b>&gt; = 10</b>
<b>FL DISPLAY</b>
<b>SCAN MODE / VFP</b>
<b>SURROUND</b>
<b>SUBTITLE</b>
<b>TV VOL+ / AUDIO VOL+</b>
<b>TV VOL- / AUDIO VOL-</b>
<b>SKIP NEXT / TUNING+</b>
<b>SKIP PREV / TUNING-</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>↶ / RETURN</b>
<b>SLEEP</b>
<b>PLAY MODE</b>
<b>DIMMER</b>

<b>ANGLE</b>
<b>TOP MENU / PG / SETUP</b>
<b>ON SCREEN</b>
<b>PAUSE / FM MODE</b>
<b>STOP / MEMORY</b>
<b>REW / SLOW-</b>
<b>PLAY / DVD</b>
<b>FWD / SLOW+</b>
<b>AUDIO</b>
<b>FM / AM</b>
<b>TV</b>
<b>USB</b>
<b>SPK. LEVEL+</b>
<b>SPK. LEVEL-</b>
<b>SPK. LEVEL</b>
<b>REPEAT</b>
<b>TITLE / GROUP</b>

POWER, MUTING, MUTE, MENU / PL / SETTINGS, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 /, SOURCE, FL DISPLAY, SCAN MODE / VFP, SURROUND, SUBTITLE, TV VOL+ / AUDIO VOL+, VOL+, VOL, / AUDIO, VOL, SKIP NEXT / TUNING+, SKIP, PREV, TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, PLAY MODE, TV/DTV, DIMMER, INFO, ANGLE, EPG, TOP MENU / PG / SETARRIBA, FAV, ON SCREEN, / N ET TV, PAUSE / FM MODE, STOP / MEMORY, / SMART, REW / SLOW, VERDE, PLAY / DVD, AMARILLO, FWD / SLOW+, AZUL, AUDIO, FM / AM, USB, SPK LEVEL+, VOL+, SPK, LEVEL, SPK LEVEL, REPEAT, TITLE / GROARRIBA, .