

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
POP-UP / MENU
ENHANCER
HDMI 1/2/3/4/5/6
AV 1/2/3
BLUETOOTH
USB
FM
DISPLAY
NET
SETUP
HOME
VOLUME+/-
PROGRAM+
PROGRAM-
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
BASS
DIRECT

MEMORY
TOP MENU
RED
GREEN
YELLOW
BLUE
OPTION
AUDIO 1/2/3
AUX
STRAIGHT
SCENE TV
SCENE NET
SCENE BD/DVD
SCENE RADIO
SKIP NEXT/PREV
TUNING >>
<< TUNING
< PRESET
PRESET >
PARTY
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, POP, ARRIBA / MENU, MENU, ENHANCER, EXIT, HDMI 1/2/3/4/5/6, 1/2/3/4/5/6, AV 1/2/3, 7/8/9, AZULTOOTH, 0USB, / AV, DISPLAY, NET, SETARRIBA, HOME, VOLUME+, VOL+/, PROGRAM+, PROGRAM, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, BASS, TV/DTV, DIRECT, INFO, MEMORY, EPG, TOP MENU, FAV, ROJO, VERDE, AMARILLO, AZUL, OPTION, AUDIO 1/2/3, 1/2/3, AUX, / AV, STRAIGHT, SCENE TV, SCENE NET, SCENE BD/DVD, SCENE RADIO, SKIP NEXT/PREV, P+/, TUNING x, TUNING, PRESET, PRESET x, PARTY, PAUSE, STOP, REW, PLAY, FWD, .