FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



	POWER
Q	D / AUDIO
	DISC MENU
	CLEAR
- }	1/2/3/4/5
į	6/7/8/9/0
	AV
	RANDOM
	DISPLAY
	ZOOM
	SETUP
	/ SUBTITLE
-	SKIP NEXT
1	SKIP PREV
	UP
	DOWN
	LEFT
	RIGHT
	ENTER
ŧ	े/ RETURN
ĺ	ANGLE
	TITLE
	PROGRAM
	MARKER
0	PEN / CLOSE

PAUSE / STEP
STOP
BACKWARD
PLAY
FORWARD
SEARCH
DVD
VCR
REPEAT
A – B
т
POWER
MUTE
AV
VOL+
VOL -
PR+
PR-
_

POWER, / AUDIO, MUTE, DISC MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV, / SOURCE, RANDOM, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, / ANGLE, TV/DTV, TITLE, INFO, PROGRAM, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, BACKWARD, VERDE, PLAY, AMARILLO, FORWARD, AZUL, SEARCH, DVD, VCR, REPEAT, SLEEP, VOL+, VOL+, VOL, PR+, .