



FUNCIONES DEL MANDO PROGRAMADO:



En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
 / AUDIO
MENU / LIST
CLEAR
1/2/3/4/5
6/7/8/9/0
AV
PR. LIST
DISPLAY
ZOOM
RESOLUTION
TEXT
PR.+
PR. -
UP
DOWN
LEFT
RIGHT
ENTER
 / RETURN
TIME SHIFT
TV / DVD
TITLE / POPUP
EPG
FAV

RED / A
GREEN / B
YELLOW / C
BLUE / D
HOME
SEARCH
HDD
DVD
PIP AUDIO
PIP
 / SUBTITLE
SKIP NEXT
SKIP PREV.
REPEAT
 / MARKER
OPEN / CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD

POWER, / AUDIO, MUTE, MENU / LIST, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 0AV, / AV, PR LIST, DISPLAY, ZOOM, RESOLUTION, TEXT, PR+, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, TIME SHIFT, SLEEP, TV / DVD, TV/DTV, TITLE / POPARRIBA, INFO, EPG, FAV, ROJO / A, ROJO, VERDE / B, VERDE, AMARILLO / C, AMARILLO, AZUL / D, AZUL, HOME, SEARCH, HDD, DVD, PIP AUDIO, PIP, / SUBTITLE, SKIP NEXT, SKIP PREV, REPEAT, / MARKER, OPEN / CLOSE, PAUSE, STOP, REC, REW, PLAY, FWD, .