

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>MUTE</b>
<b>MENU / POPUP MENU</b>
<b>EXIT</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>FUNCTION</b>
<b>KEY / ECHO</b>
<b>DISPLAY</b>
<b>RESOLUTION</b>
<b>TOOLS</b>
<b>SUBTITLE</b>
<b>VOL +/-</b>
<b>SKIP NEXT / PREV.</b>
<b>UP / DOWN</b>
<b>LEFT / RIGHT</b>
<b>ENTER</b>
<b>↵ / RETURN</b>
<b>SLEEP</b>
<b>CD / SACD</b>
<b>DIMMER</b>
<b>HOME MEDIA GALLERY</b>
<b>TOP MENU</b>
<b>OPEN / CLOSE</b>
<b>PAUSE</b>

<b>STOP</b>
<b>USB REC</b>
<b>REV</b>
<b>PLAY</b>
<b>FWD</b>
<b>AUDIO</b>
/ <b>HOME MENU</b>
<b>CLEAR</b>
<b>ANGLE</b>
<b>VIRTUAL 3D SOUND</b>
<b>CONTINUED</b>
<b>REPLAY</b>
<b>NET CONTENT</b>
<b>MIC VOL +/-</b>
<b>↔ / SKIP SEARCH</b>
<b>REPEAT</b>
<b>A – B</b>
<b>KARAOKE</b>
<b>SOUND</b>
<b>YOUTUBE</b>
<b>R / PROGRAM</b>
<b>G / BOOKMARK / RDS</b>
<b>Y / ZOOM / PTY</b>
<b>B / INDEX</b>

POWER, MUTE, MENU / POPARRIBA MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, / AV, KEY / ECHO, DISPLAY, RESOLUTION, TOOLS, SUBTITLE, VOL +/, VOL+/, SKIP NEXT / PREV, P+, ARRIBA / ABAJO, IZQUIERDA / DERECHA, ENTER, / RETURN, BACK, SLEEP, CD / SACD, TV/DTV, DIMMER, INFO, HOME MEDIA GALLERY, EPG, TOP MENU, FAV, OPEN / CLOSE, PAUSE, STOP, USB REC, ROJO, REV, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, / HOME MENU, CLEAR, ANGLE, VIRTUAL 3D SOUND, CONTINUED, REPLAY, NET CONTENT, MIC VOL +/, VOL+/, / SKIP SEARCH, DERECHA, REPEAT, KARAOKE, SOUND, YOUTUBE, R / PROGRAM, G / BOOKMARK / RDS, Y / ZOOM / PTY, B / INDEX, .