

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



| |
|--------------------|
| |
| MUTE |
| HOME |
| BLUETOOTH |
| NET |
| TUNER |
| USB |
| DISPLAY |
| BAND |
| SETUP |
| ENHANCER |
| VOLUME + |
| VOLUME - |
| PROGRAM + |
| PROGRAM - |
| UP |
| DOWN |
| LEFT |
| RIGHT |
| ENTER |
| RETURN |
| SLEEP |
| MODE |
| PURE DIRECT |
| MEMORY |

| |
|-----------------------|
| TOP MNEU |
| RED |
| GREEN |
| YELLOW |
| BLUE |
| OPTION |
| SCENE 1 |
| SCENE 2 |
| SCENE 3 |
| SCENE 4 |
| SUR DECODE |
| STRAIGHT |
| POP UP MENU |
| INPUT + |
| INPUT - |
| SKIP NEXT |
| SKIP PREV |
| PAUSE |
| STOP |
| REW / TUNING - |
| PLAY |
| FWD / TUNING + |
| |
| |
| |

POWER, MUTE, HOME, MENU, AZULTOOTH, NET, TUNER, USB, DISPLAY, BAND, SETARRIBA, ENHANCER, VOLUME+, VOL+, VOLUME, VOL, PROGRAM+, PROGRAM, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, MODE, TV/DTV, PURE DIRECT, INFO, MEMORY, EPG, TOP MNEU, FAV, ROJO, VERDE, AMARILLO, AZUL, OPTION, SCENE 1, SCENE 2, SCENE 3, SCENE 4, SUR DECODE, STRAIGHT, POP ARRIBA MENU, INPUT+, VOL+, INPUT, VOL, SKIP NEXT, SKIP PREV, PAUSE, STOP, REW / TUNING, PLAY, FWD / TUNING +, .