

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
[TV Icon] / MENU
EXIT
1/2/3/4/5
6/7/8/9/0
[Source Icon] / SOURCE
REFRESH
[Display Icon] / DISPLAY
SIZE / SUBTITLE
MIX / FAV LIST
[TV Icon] / TXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
[Recall Icon] / RECALL
P. MODE
TV / RADIO
INDEX

SUBPAGE
FREEZE
HOLD
RED
GREEN
YELLOW
BLUE
AUDIO / CANCEL
S. MODE
REVEAL
SKIP NEXT
SKIP PREV
STOP
REW
PLAY / PAUSE
FWD

STANDBY, POWER, MUTE, / MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 / SOURCE, / SOURCE, REFRESH, / DISPLAY, SIZE / SUBTITLE, MIX / FAV LIST, / TXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, / RECALL, BACK, MODE, SLEEP, TV / RADIO, TV/DTV, INDEX, INFO, SUBPAGE, EPG, FREEZE, FAV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO / CANCEL, S MODE, REVEAL, SKIP NEXT, SKIP PREV, STOP, REW, PLAY / PAUSE, FWD, .