

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER ON
MUTE
TIME
CLEAR
1/2/3/4/5
6/7/8/9/0
STANBY
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV.
PRESET CALL UP
PRESET CALL DOWN
DISC SKIP
SLEEP
RDS MODE
DIMMER
PAUSE
STOP
REW
PLAY
FWD
AUX 1
CD
PHONO

TAPE 1
MD / TAPE 2
TUNER
REPEAT 1/ALL
A - B REPEAT
TAPE 1 PAUSE
TAPE1 STOP
TAPE 1 PLAY REVERSE
TAPE 1 REW
TAPE 1 PLAY
TAPE 1 FWD

POWER ON, POWER, MUTE, TIME, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0STANBY, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, PRESET CALL ARRIBA, PRESET CALL ABAJO, ABAJO, DISC SKIP, DERECHA, SLEEP, RDS MODE, TV/DTV, DIMMER, INFO, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUX 1, PHONO, TAPE 1, MD / TAPE 2, TUNER, REPEAT 1/ALL, BACK, B REPEAT, TAPE 1 PAUSE, TAPE1 STOP, TAPE 1 PLAY REVERSE, ROJO, TAPE 1 REW, TAPE 1 PLAY, TAPE 1 FWD, .