

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTING
DVD MENU
CLEAR
1/2/3/4/5
6/7/8/9/10-0
FUNCTION
>10
DISPLAY
STEREO / MONO
DVD SETUP
SUBTITLE
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
TIME
TV VIDEO
DIMMER

MEMORY
SOUND FIELD
OPEN / CLOSE
PAUSE
STOP
REW
PLAY / SELECT
FWD
AUDIO
AMP MENU
DVD DISPLAY
BAND
ANGLE
PLAY MODE
ENTER
REPEAT
TITLE
NAME

POWER, MUTING, MUTE, DVD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/1, 006/7/8/9/, 0FUNCTION, / SOURCE, DISPLAY, STEREO / MONO, DVD SETARRIBA, SUBTITLE, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, TIME, SLEEP, TV VIDEO, TV/DTV, DIMMER, INFO, MEMORY, EPG, SOUND FIELD, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY / SELECT, AMARILLO, FWD, AZUL, AUDIO, AMP MENU, DVD DISPLAY, BAND, ANGLE, PLAY MODE, REPEAT, TITLE, NAME, .