

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
[Icon] / MENU
[Icon] / EXIT
1/2/3/4/5
6/7/8/9/0
REMAIN
DSP EQ
ZOOM
CD RIPPING
SUBTITLE
VOL+
VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
[Icon] / ENTER
[Icon] / RETURN
STEP
MO / ST
INFO
TUNER MEMORY

LOGO
EJECT
PAUSE
STOP
REW
PLAY
FWD
AUDIO
AUX
DVD
PORT
TUNER
SOUND EDIT
PLII MODE
PLII EFFECT
TUNING / CH+
TUNING / CH -
REPEAT
SLOW
P. BASS
DIMMER

POWER, MUTE, / MENU, MENU, / EXIT, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0REMAIN, DSP EQ, ZOOM, CD RIPPING, SUBTITLE, VOL+, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, STEP, SLEEP, MO / ST, TV/DTV, INFO, TUNER MEMORY, EPG, LOGO, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, AUX, DVD, PORT, TUNER, SOUND EDIT, PLII MODE, PLII EFFECT, TUNING / CH+, TUNING / CH, REPEAT, SLOW, P BASS, DIMMER, .