

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

	LIBRARY	TIME SLIP
 / AUDIO	EASY NAV	TIME BAR
MENU	EJECT	PROGRESSIVE
CLEAR	PAUSE	REMAIN
1/2/3/4/5	STOP	RED
6/7/8/9/0	REC	GREEN
INPUT SELECT	REW	YELLOW
+10	PLAY	BLUE
DISPLAY	FWD	
ZOOM	CONTENT MENU	
SETUP	P in P	
 / SUBTITLE	HDD	
FRAME / ADJUST NEXT	DVD	
FRAME / ADJUST PREV.	REC MENU	
SKIP NEXT	REC MODE	
SKIP PREV.	 / ANGLE	
UP	EDIT MENU	
DOWN	INSTANT SKIP	
LEFT	CHP DIVIDE	
RIGHT	INSTANT REPLAY	
ENTER	SLOW NEXT	
RETURN	SLOW PREV.	
TIME SEARCH	CJANNEL+	
FL SELECT	CHANNEL -	
DIMMER	DELETE	

POWER, / AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, FRAME / ADJUST NEXT, VOL+, FRAME / ADJUST PREV, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIME SEARCH, SLEEP, FL SELECT, TV/DTV, DIMMER, INFO, LIBRARY, EPG, EASY NAV, FAV, EJECT, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, CONTENT MENU, P in P, HDD, DVD, REC MENU, REC MODE, / ANGLE, EDIT MENU, INSTANT SKIP, CHP DIVIDE, INSTANT REPLAY, SLOW NEXT, VOL+, SLOW PREV, VOL, CJANNEL+, CHANNEL, DELETE, TIME SLIP, TIME BAR, PROGRESSIVE, REMAIN, SHFIT+AZUL, .