

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
SEARCH
1/2/3/4/5
6/7/8/9/0
FUNCTION
10+
OSD
GOTO
SETUP
SUBTITLE
VOL+
VOL -
SKIP NEXT / CH+
SKIP PREV. / CH -
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
STEP
DVD / USB
TITLE

PROG.
LANGUAGE
OPEN / CLOSE
STOP
REW / FF -
PLAY / PAUSE
FWD / FF+
SOURCE
ANGLE
PBC
ZOMM
COPY
V - MODE
REPEAT
A - B
N / P
LOUDNESS
SLOW

POWER, MUTE, MENU, SEARCH, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, / AV, 10+, OSD, GOTO, SETARRIBA, SUBTITLE, VOL+, VOL, SKIP NEXT / CH+, SKIP PREV / CH, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, STEP, SLEEP, DVD / USB, TV/DTV, TITLE, INFO, PROG, EPG, LANGUAGE, FAV, OPEN / CLOSE, STOP, REW / FF, VERDE, PLAY / PAUSE, AMARILLO, FWD / FF+, AZUL, SOURCE, / AV, ANGLE, PBC, ZOMM, COPY, MODE, REPEAT, N / P, LOUDNESS, SLOW, SHFIT+FAV, .