

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU / LIST
CLEAR
1/2/3/4/5
6/7/8/9/0
AV
CD / DVD
DISPLAY
ZOOM
SETUP
... / SUBTITLE
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER / MEMORY
⌂ / RETURN
TIMER REC
TV
TITLE

REC MODE
MARKER
OPEN / CLOSE
PAUSE / STEP
STOP
REC
REW
PLAY
FWD
AUDIO
SEARCH
PIP
FM / AM
SHOWVIEW
INSTANT SKIP
SOUND MODE
THUMBNAIL
XTS
XTS PRO
REPEAT
REPEAT A - B
CHP ADD

POWER, MUTE, MENU / LIST, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV, / AV, CD / DVD, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER / MEMORY, / RETURN, BACK, TIMER REC, SLEEP, TV/DTV, TITLE, INFO, REC MODE, EPG, MARKER, FAV, OPEN / CLOSE, PAUSE / STEP, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, SEARCH, PIP, FM / AM, SHOWVIEW, INSTANT SKIP, SOUND MODE, THUMBNAIL, XTS, XTS PRO, REPEAT, REPEAT A, CHP ADD, .