

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
PTY / HDMI
RDS / RESOL
DISPLAY
ZOOM
SETUP
[ ] / S - TITLE
VOL+
VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
[ ] / RETURN
SLEEP
VSN
DIMMER

PROG. / MEMO
MARKER
OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
[ ] / AUDIO
XTS Pro
SEARCH
AUX
DVD
TUNER
USB
PRESET NEXT
PRESET PREV
TUN -
TUN+
REPEAT
REPEAT A - B
TITLE
SOUND

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0PTY / HDMI, SOURCE, RDS / RESOL, DISPLAY, ZOOM, SETARRIBA, / S, TITLE, VOL+, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, VSN, TV/DTV, DIMMER, INFO, PROG / MEMO, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, / AUDIO, XTS Pro, SEARCH, AUX, DVD, TUNER, USB, PRESET NEXT, PRESET, TUN, TUN+, REPEAT, REPEAT A, TITLE, SOUND, .