

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER RECEIVER
MUTE
STANDARD
SEARCH
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
CH SELECT
DISPLAY
SUPER BASS
MIDNIGHT
VIRTUAL
MASTER VOLUME+
MASTER VOLUME -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
QUIET
RF ATT
STEREO
DIMMER

TEST TONE
MUSICAL
AUTO
ACTION
BAND
DVD
FRONT
TUNER
TV / SAT
VCR
MPX
CLASS
5 - D
FLAT
CH LEVEL+
CH LEVEL -
L
M
S
PHONE SURR
TV SURR
GAME
DRAMA
DIRECT ACCESS

POWER RECEIVER, POWER, MUTE, STANDARD, MENU, SEARCH, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, CH SELECT, DISPLAY, SARRIBAER BASS, MIDNIGHT, VIRTUAL, MASTER VOLUME+, VOL+, MASTER VOLUME, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, QUIET, BACK, RF ATT, SLEEP, STEREO, TV/DTV, DIMMER, INFO, TEST TONE, EPG, MUSICAL, FAV, AUTO, ACTION, BAND, DVD, FRONT, TUNER, TV / SAT, VCR, MPX, CLASS, FLAT, CH LEVEL+, CH LEVEL, PHONE SURR, TV SURR, GAME, DRAMA, DIRECT ACCESS, .