

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>MENU</b>
<b>CLEAR</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>INPUT SELECT</b>
<b>HDD / DVD</b>
<b>DISPLAY</b>
<b>ANGLE</b>
<b>HOME MENU</b>
<b>SUBTITLE</b>
<b>SKIP NEXT</b>
<b>SKIP PREC.</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETURN</b>
<b>ONE TOUCH COPY</b>
<b>TV / DVD</b>
<b>HELP</b>
<b>SHOW VIEW</b>
<b>TOP MENU / DISC NEVIG.</b>

<b>PAUSE</b>
<b>STOP</b>
<b>REC</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>CHANNEL+</b>
<b>CHENNEL -</b>
<b>CM BACK</b>
<b>CM SKIP</b>
<b>STOP REC</b>
<b>REC MODE</b>
<b>TV DIRECT REC</b>

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, HDD / DVD, DISPLAY, ANGLE, HOME MENU, SUBTITLE, SKIP NEXT, SKIP PREC, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, ONE TOUCH COPY, SLEEP, TV / DVD, TV/DTV, HELP, INFO, SHOW VIEW, EPG, TOP MENU / DISC NEVIG, FAV, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, CHANNEL+, CHENNEL, SHFIT+ P, CM BACK, CM SKIP, STOP REC, REC MODE, TV DIRECT REC, .