## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



	STANDBY
	AUDIO
	MENU
	CLEAR
	1/2/3/4/5
	6/7/8/9/0
١	VIDEO SOURCE
	WATCH TV
	DISPLAY
	ZOOM
	SETUP
	SUBTITLE
	SKIP NEXT
	SKIP PREV
	UP
	DOWN
	LEFT
	RIGHT
	SELECT
	RETURN
	TIMER
	TV / DVD
	TITLE
	REC MODE
,,	NSERT CHAPTE

O	PEN / CLOSE
	STOP
	RECORD
	REW
P	LAY / PAUSE
	FWD
SE	ARCH MODE
)	PLAY MODE
	ADD
	ANGLE
F	PROGRAM+
1	PRIGRAM -
	REPEAT
	A – B
	_

STANDBY, POWER, AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0VIDEO SOURCE, / AV, WATCH TV, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, SELECT, RETURN, BACK, TIMER, SLEEP, TV / DVD, TV/DTV, TITLE, INFO, REC MODE, EPG, INSERT CHAPTER, FAV, OPEN / CLOSE, STOP, RECORD, ROJO, REW, VERDE, PLAY / PAUSE, AMARILLO, FWD, AZUL, SEARCH MODE, PLAY MODE, ADD, ANGLE, PROGRAM+, PRIGRAM, REPEAT, SHFIT+SLEEP, .