

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
LIST / GOTO
P. MODE
S. MODE
MIX / A - B
TTX / TITLE
VOL +/-
CH +/-
UP
DOWN
LEFT
RIGHT
OK
NICAM / REPEAT
SLEEP
DTV
INFO
EPG / DISPLAY
FAV / AUDIO

ASPECT
FREEZE
HOLD
RED
GREEN
YELLOW
BLUE
REVEAL
SIZE / MENU PBC
SETUP
SUBTITLE / SUBTITLE
SKIP NEXT/PREV
OK
RECALL
TV / RADIO
INDEX
EJECT
STOP
REW
PLAY / PAUSE
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / AV, LIST / GOTO, P MODE, S MODE, MIX / A, TTX / TITLE, VOL +/, P +/, ABAJO, IZQUIERDA, DERECHA, NICAM / REPEAT, BACK, SLEEP, DTV, TV/DTV, INFO, EPG / DISPLAY, EPG, FAV / AUDIO, FAV, ASPECT, FREEZE, HOLD, ROJO, VERDE, AMARILLO, AZUL, REVEAL, SIZE / MENU PBC, SETARRIBA, SUBTITLE / SUBTITLE, SKIP NEXT/PREV, RECALL, TV / RADIO, INDEX, EJECT, STOP, REW, PLAY / PAUSE, FWD, .