

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
HOME MENU
DISPLAY
ONE TOUCH PLAY
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
TIMER REC
TV DIREC REC
INFO
GUIDE
DISC NAVIGATOR
DVD OPEN/CLOSE
PAUSE
STOP

REC
REV SCAN
PLAY
FWD SCAN
DVD
HDD
VHS
HELP
CH+
CH-
STEP
SLOW
CM BACK
CM SKIP
REC MODE
STOP REC
RED / AUDIO
GREEN / SUB
YELLOW / ANGLE
BLUE / PLAY MODE

STANDBY / ON, POWER, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, SOURCE, HOME MENU, DISPLAY, ONE TOUCH PLAY, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIMER REC, SLEEP, TV DIREC REC, TV/DTV, INFO, GUIDE, EPG, DISC NAVIGATOR, FAV, DVD OPEN/CLOSE, PAUSE, STOP, REC, ROJO, REV SCAN, VERDE, PLAY, AMARILLO, FWD SCAN, AZUL, DVD, HDD, VHS, HELP, CH+, STEP, SLOW, CM BACK, CM SKIP, SHIT+DERECHA, REC MODE, STOP REC, ROJO / AUDIO, VERDE / SUB, AMARILLO / ANGLE, AZUL / PLAY MODE, .