

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



DVD POWER
TV
MENU
CANCEL / X
1/2/3/4/5
6/7/8/9/0
TV AV
EDIT
DISPLAY
LIVE
PROGRESSIVE SCAN
SUBTITLE
TV VOL+
TV VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
VHS
NAVIGATION
ON SCREEN

/ PROGRAMME
TOP MENU
EJECT / SETUP
PAUSE
STOP / CLEAR
REC
REW
PLAY / SELECT
FWD
TV/CBL/SAT POWER
SAT
VHS
HDD
DVD
ANGLE
JUMP+
JUMP -
PR+
PR -
VPS/PDC
DUBBING
REC MODE

DVD POWER, POWER, MUTE, MENU, CANCEL / X, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0TV AV, / SOURCE, EDIT, DISPLAY, LIVE, PROGRESSIVE SCAN, SUBTITLE, TV VOL+, VOL+, TV VOL, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, VHS, SLEEP, NAVIGATION, TV/DTV, ON SCREEN, INFO, / PROGRAMME, EPG, TOP MENU, FAV, EJECT / SETARRIBA, PAUSE, STOP / CLEAR, REC, ROJO, REW, VERDE, PLAY / SELECT, AMARILLO, FWD, AZUL, TV/CBL/SAT POWER, SAT, VHS, HDD, DVD, ANGLE, JUMP+, VOL+, JUMP, VOL, PR+, VPS/PDC, DUBBING, REC MODE, .