FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



S	TANDBY ON/OFF
	MUTE
	DVD MENU
	CLEAR
	1/2/3/4/5
	6/7/8/9/0
	RANDOM
V.	SCREEN ON/OFF
	DISPLAY
	ZOOM
	SETUP
	SUBTITLE
	SKIP NEXT
	SKIP PREV
	UP
	DOWN
	LEFT
	RIGHT
	ENTER
	RETURN
	KEY LOCK
	ANGLE
	TITLE MENU
	PROGRAM
	BOOKMARK

ı	PAUSE / STEP	
	STOP	
	REW	
	PLAY	
	FWD	
ğ	AUDIO MODE	
d	AUDIO MENU	
	SEARCH	
	3D	
	SLOW / R	
	SLOW / F	
	REPEAT	
	A - B	
	DIGEST	
	PBC	

STANDBY ON/OFF, POWER, MUTE, DVD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0RANDOM, / SOURCE, SCREEN ON/OFF, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, KEY LOCK, SLEEP, ANGLE, TV/DTV, TITLE MENU, INFO, PROGRAM, EPG, BOOKMARK, FAV, PAUSE / STEP, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO MODE, AUDIO MENU, SEARCH, SHIIFT+EXIT, SLOW / R, SLOW / F, REPEAT, DIGEST, PBC, .