

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT
LIST
P. MODE
S. MODE
PROG
TEXT / MENU
VOL+/-
CH+/-
UP
DOWN
LEFT
RIGHT
OK
BACK
S
TV.RD / ANGLE
INFO
TITLE / GUIDE
FAV / SETUP

ASPECT
HOLD
RED / GOTO
GREEN / SLOW
YELLOW / REPEAT
BLUE / A - B
AUDIO
REVEAL
ZOOM
SUBPAGE
SKIP NEXT/PREV
↑
↓
← / CANCEL
→ / SIZE
OK / MIX
INDEX
EJECT
PAUSE / STEP
STOP
REC
REW
PLAY
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, / SOURCE, LIST, P MODE, S MODE, PROG, TEXT / MENU, VOL+/, CH+/, P+/, ABAJO, IZQUIERDA, DERECHA, BACK, SLEEP, TVRD / ANGLE, TV/DTV, INFO, TITLE / GUIDE, EPG, FAV / SETARRIBA, FAV, ASPECT, / NET TV, HOLD, / SMART, ROJO / GOTO, ROJO, VERDE / SLOW, VERDE, AMARILLO / REPEAT, AMARILLO, AZUL / A, AZUL, AUDIO, REVEAL, ZOOM, SUBPAGE, SKIP NEXT/PREV, P+/, / CANCEL, / SIZE, OK / MIX, INDEX, EJECT, PAUSE / STEP, STOP, REC, REW, PLAY, FWD, .