

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



/ MENU
CANCEL
1/2/3/4/5
6/7/8/9/0
TEST TONE
REMAIN
LOGO
ZOOM
DSP / EQ
SUBTITLE
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
OK
/ RETURN
SLEEP
MO / ST SLOW
INFO

PLII MODE
PLII EFFECT
OPEN / CLOSE
STOP
PLAY / PAUSE
AUDIO
DIGEST
TUNER
AUX
DVD
TUN / CH+
TUN / CH -
REPEAT
STEP
NT/PAL TUNER MEMORY
DIMMER
SOUND EDIT
P. SCAN TUNER MEMORY

POWER, MUTE, / MENU, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0TEST TONE, / SOURCE, REMAIN, LOGO, ZOOM, DSP / EQ, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, / RETURN, BACK, SLEEP, MO / ST SLOW, TV/DTV, INFO, PLII MODE, EPG, PLII EFFECT, FAV, OPEN / CLOSE, STOP, PLAY / PAUSE, AMARILLO, AUDIO, DIGEST, TUNER, AUX, DVD, TUN / CH+, TUN / CH, REPEAT, STEP, NT/PAL TUNER MEMORY, DIMMER, SOUND EDIT, P SCAN TUNER MEMORY, .