

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



AUDIO
POP - UP MENU
EXIT
1/2/3/4/5
6/7/8/9/0
FUNCTION
ANGLE
DISPLAY
SETUP
SUBTITLE
ZOOM+
ZOOM -
SKIP NEXT
SKIP RPEV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLOW
COMPONENT RESET
TITLE LIT / TOP MENU

SKIP SEARCH
REPLAY
OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
OFF
LIGHT
CLEAR
HDMI
ENTER
REPEAT
RED / A
GREEN / B
YELLOW / C
BLUE / D

POWER, AUDIO, MUTE, POP, ARRIBA MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, / SOURCE, ANGLE, DISPLAY, SETARRIBA, SUBTITLE, ZOOM+, VOL+, ZOOM, VOL, SKIP NEXT, SKIP RPEV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLOW, SLEEP, COMPONENT RESET, TV/DTV, TITLE LIT / TOP MENU, INFO, SKIP SEARCH, EPG, REPLAY, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, OFF, LIGHT, CLEAR, HDMI, REPEAT, ROJO / A, ROJO, VERDE / B, YELLOW / C, AZUL / D, .