

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



⏻
MUTING
INTRO
AUTO OFF
1/2/3/4/5
6/7/8/9/0
AUX
>10
DISPLAY
S. SOUND EQ
CLOCK / TIMER
SOUND
VOL+
VOL -
SKIP NEXT
SKIP PREV
ALBUM PREV
ALBUM NEXT
ENTER
DEL
SLEEP
TUNER / BAND
TITLE SEARCH
PROGRAM
MARKER

STOP / CLEAR
⏪ PLAY / REC
CD PLAY / PAUSE
SURROUND
DISC
REPEAT
PLAY MODE
DIMMER
TAPE PLAY

POWER, MUTING, MUTE, INTRO, MENU, AUTO OFF, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AUX, / SOURCE, DISPLAY, S SOUND EQ, CLOCK / TIMER, SOUND, VOL+, VOL, SKIP NEXT, SKIP PREV, ALBUM PREV, IZQUIERDA, ALBUM NEXT, DERECHA, ENTER, DEL, BACK, SLEEP, TUNER / BAND, TV/DTV, TITLE SEARCH, INFO, PROGRAM, EPG, MARKER, FAV, STOP / CLEAR, PLAY / REC, ROJO, CD PLAY / PAUSE, AMARILLO, SURROUND, DISC, REPEAT, PLAY MODE, DIMMER, TAPE PLAY, .